

Electric Round Bain Marie – Quick User Guide

Models: INF-2TT / INF-4TT / INF-6TT

1. Technical Specifications

Model	Voltage (V)	Frequency (Hz)	Power (kW)	Dimensions (mm)
INF-2TT	230–240	50	1.0	365×595×352
INF-4TT	230–240	50	1.5	520×595×352
INF-6TT	230–240	50	2.0	800×595×352

2. Safety Precautions

- Place on a stable surface with at least 10 cm space on sides and 20 cm at the back.
- Ensure power supply matches nameplate voltage ($\pm 10\%$).
- Use a grounded outlet – never connect ground to water, gas, or heating pipes.
- Only qualified electricians should replace cables or electrical parts.
- Keep away from children or those unable to use safely without supervision.
- If on a stand, secure it to prevent sliding.

3. Operating Instructions

- Check installation before use.
- Turn on power – red light means power is on.
- Turn thermostat clockwise to desired temperature – yellow light shows heating.
- When temperature is reached, yellow light turns off automatically.
- Keep water level at least 10 mm above heating element – never operate dry.
- After use, turn thermostat counterclockwise to OFF and switch off power.
- Use gloves or a towel to remove trays – surfaces are hot.

4. Cleaning and Maintenance

- Always unplug before cleaning.
- Use a damp cloth with mild detergent.
- Never spray water directly or use steam cleaners.

5. Troubleshooting

Problem	Possible Cause	Solution
No power or light	Fuse blown	Replace fuse
Lights on but no heat	Loose wiring	Tighten connections
Overheating	Thermostat faulty	Replace thermostat
Light off, temperature normal	Burned-out bulb	Replace light