




# Electric Rice Cooker

Please read this manual carefully before use to understand the correct use of the function.

## Basic Details

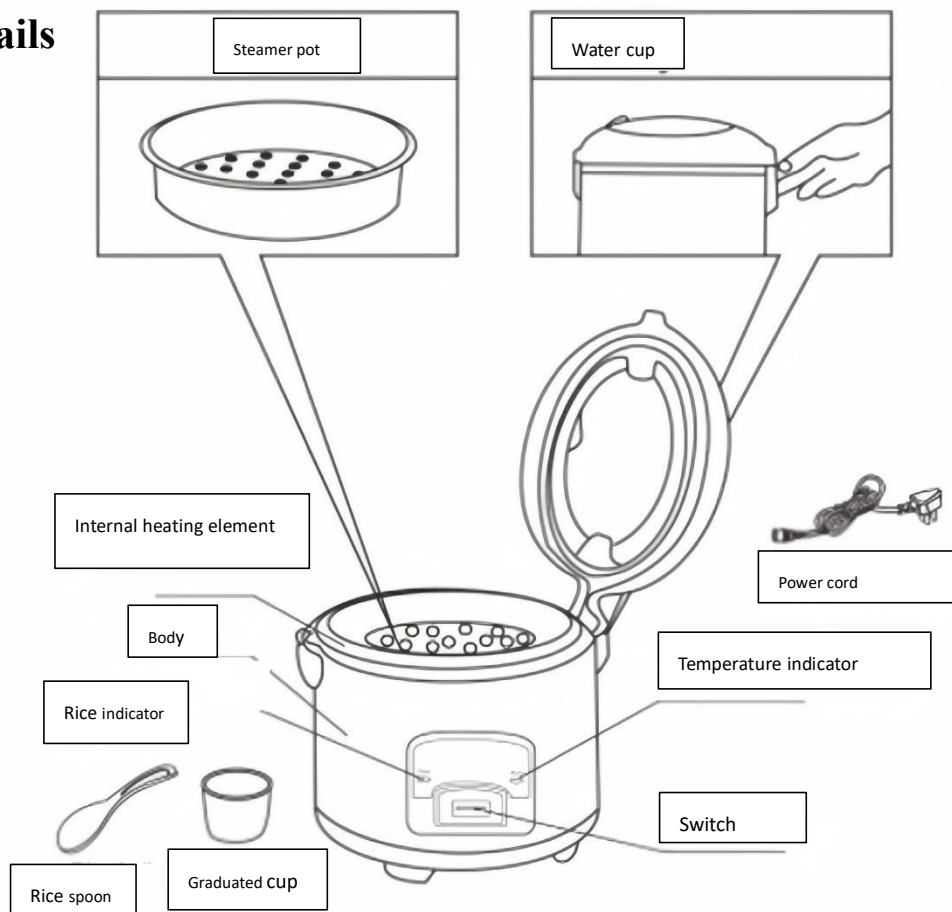

Some rice measuring cups and a rice spoon are included with the rice cooker.

### Environmental Protection

After the end of its life, do not dispose of it with household waste. Deliver the instrument to a special recycling station. This will help protect the environment.

The crossed - out dustbin symbol indicates that this product must not be disposed of with household waste. To prevent damage to health and the environment, waste electrical and electronic equipment must be separated for collection and recycling, to promote the reuse of materials and the proper treatment of toxic substances. For more information on the recycling of this product, contact your local authority, the waste disposal service, the store where you purchased the product, or the equipment manufacturer.

### Rice Production

1. Measure the amount of rice for normal cooking until the surface of the rice becomes translucent.
2. Soak the rice in water for a while and then drain the water.
3. Do not wash rice with hot water as it may damage the inside of the machine.
4. Place the washed rice in the rice cooker. Make sure this contact is with the heating element.
5. Add an appropriate amount of water. The amount of water depends on personal taste and the type of rice.
6. Do not touch the hot surfaces of the rice cooker during or immediately after cooking. Use the handle on the outside of the lid.
7. During cooking, steam may escape from the sides, and water droplets may form on the outer surface during cooking. The humidity may vary from one appliance to another.

8. Keep the lid properly closed. If the lid is not closed properly, the performance of the appliance will be reduced.
9. Do not place the rice cooker on a slanted surface. The rice cooker may tip over.
10. Insert the power cord into the rice cooker first, then insert the power plug into the power socket.
11. When the rice is cooked, the rice cooker will automatically switch to the warm - keeping function (warming) and then click to the standby state of the appliance.
12. The rice cooker is equipped with a switch.
13. When the rice is cooked, the water in the rice cooker will be absorbed. The heating retention indicator (heating) will turn off to indicate that the rice is cooked.
14. Do not open the lid immediately; wait about 15 minutes before opening to allow the rice to continue cooking and avoid overflow.
15. It is not advisable to cook rice again within 15 minutes after cooking to prevent overflow.

Prohibited for children and people with physical or intellectual disabilities or delayed responses.

1. Do not let children play with this appliance.
2. Do not use this appliance with a damaged power cord. Contact the Service Center immediately for replacement.
3. Recommendations for thermal insulation and improving the quality of rice

Rice bran can give cooked rice an unpleasant smell. To quickly get rid of the smell, wash the rice with plenty of water. If the rice is kept warm for more than 5 hours, it may discolor or start to smell bad. The sooner you serve the cooked rice, the more delicious it will be. Be careful not to damage the inner lid. Deformation of the inner lid reduces the cooking quality. To prevent the cooked rice from drying out, discoloring, or producing an unpleasant smell, close the outer lid immediately after warming the rice. Do not leave the spoon and other utensils in the rice cooker while the heat - keeping function is on. Do not heat the rice cooker without rice inside.

#### Use of steam cookers

1. Place the steam rack in the rice cooker.
2. Put the finished product in the steam cooker.
3. Pour in water. The water level should not be above the minimum level of the steam machine 01.
4. The cooking time depends on the steam temperature, the amount of water, and the voltage of the power grid. To increase the cooking time, you can add a little more water.
5. Products for steaming: bread and flour products, vegetables, meat, chicken, and pastries.

#### i Important Tips!

If the power cord is damaged, contact the manufacturer, service representative, or another qualified electrician for replacement to avoid damage. The device is equipped with safety fuses. If the rice cooker is empty, it will heat up and then automatically turn off after a period of time. The pot will not be damaged until it cools down. After cooking, remove the power cord. When the body of the rice cooker cools down, clean the body of the rice cooker and other parts:

- Clean the body of the rice cooker with a clean cloth.
- Remove the inner pot and the inner lid, clean them with detergent. Then dry them with a soft cloth.
- Clean the outer pot and the outer lid with a clean, damp cloth.
- Do not use abrasives and sharp cleaning liquids to clean the rice cooker.

- Do not immerse the rice cooker in water or other liquids.
- Rice grains and foreign objects can adhere to the heating elements. Remove them to maintain good contact between the heating element and the bottom of the pot.
- If there is scale in the rice cooker, you can remove it with a scale remover. Then polish the contaminated parts and maintain
- Insufficient contact between the rice cooker and the power socket can cause an unpleasant smell.
- Vinegar can cause corrosion.
- Use only plastic utensils.
- Do not wash the rice cooker with a scrubber. Use soft brushes or white cloths.
- Due to private use, the color of the surface may change. This does not affect the non - stick coating and the quality

|                  |                         |
|------------------|-------------------------|
| <b>Modelo</b>    | <b>INF-IRC42</b>        |
| <b>Volt</b>      | <b>220-240V/50-60HZ</b> |
| <b>Potencia</b>  | <b>1.9KW</b>            |
| <b>Capacidad</b> | <b>10L</b>              |