


Electric Food Warmer

Manual

INF-PFW1

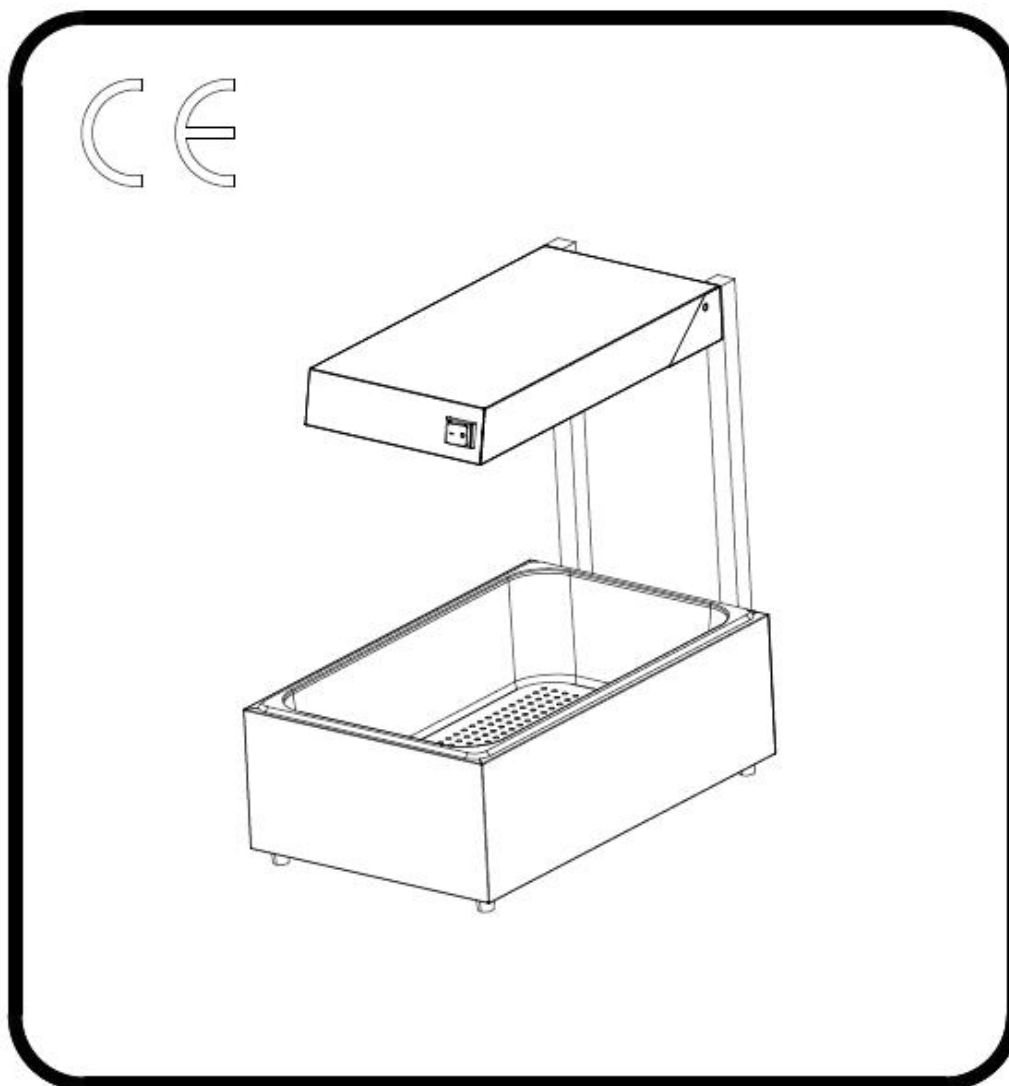

Please read this instruction manual carefully before operating this equipment.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

First of all, thank you very much for choosing our products.

If there is a special structure, additional specified options, or due to new technology changes, the scope of actual supply may deviate from the descriptions and descriptions mentioned here. If you have any questions please contact the manufacturer.

In order to make full use of the performance of this product and reduce unnecessary losses and injuries, please read the operating instructions carefully before starting any operation on the device, especially before starting the device!

The manufacturer assumes no responsibility for damage or negligence caused by non-compliance with the operating instructions.

This manual should be placed directly on the device so that the operator can easily read it. Within the scope of improving performance characteristics and further development, we reserve the right to retain technical changes to the product.



WARNINGS

1. Any modification and incorrect installation, adjustment, repair or maintenance may cause property damage or personal injury. If adjustment or repair is needed, please contact the supplier and carry out the training by a professional.
2. For your safety, please do not store or use flammable and explosive gas, liquid or articles near this product.
3. This device should not be used by persons (including children) with physical, sensory, or psychological impairments or lack of experience or knowledge, unless someone is responsible for their safety or gives instructions on how to operate the device.
4. Please supervise children to ensure that they are not playing with the device.
5. Please store the operating instructions carefully. If the device is used by a third party, please hand over the operating instructions. All users of the device must adhere to the operating instructions and safety guidelines.
6. Do not store or use flammable and explosive gases, liquids or articles near the place of use.
7. If the appliance is positioned close to walls, partitions, kitchen equipment, decorative panels, etc., it is recommended that these equipment and facilities be made of non-combustible materials, otherwise they should be covered with appropriate non-combustible thermal insulation materials and pay close attention to fire regulations.

Catalog

I.	Product Introduction	4
II.	The Basic Parameters of The Product.....	4
III.	Explanation of Symbols	4
IV.	Working Principle	5
V.	Notes	5
VI.	Instructions for Use	5
VII.	Daily Inspections	6
VIII.	Cleaning and Maintenance	6
IX.	Fault Analysis and Troubleshooting	6
X.	Packing List	6

I. Product Introduction

INF-PFW1 electric food warmer is easy to operate, takes up less space, and the body is made of stainless steel, which is durable. This product is the best choice for hotels, bars, restaurants, snack bars, etc.

II. The Basic Parameters of The Product

Model	Using Electric	Rated input power (kW)	Pan	Dimensions (mm)	N.W.(kg)
INF-PFW1	220-240V~/50Hz	0.3	1*1/1*150mm	340*565*580	6

III. Explanation of Symbols

In this manual, symbols are used to highlight all important safety instructions and recommendations related to the equipment. To avoid the risk of accidents, personal injury or property damage, please follow these instructions carefully.



Equipotential




Ground wire



High temperature

IV. Working Principle

INF-PFW1

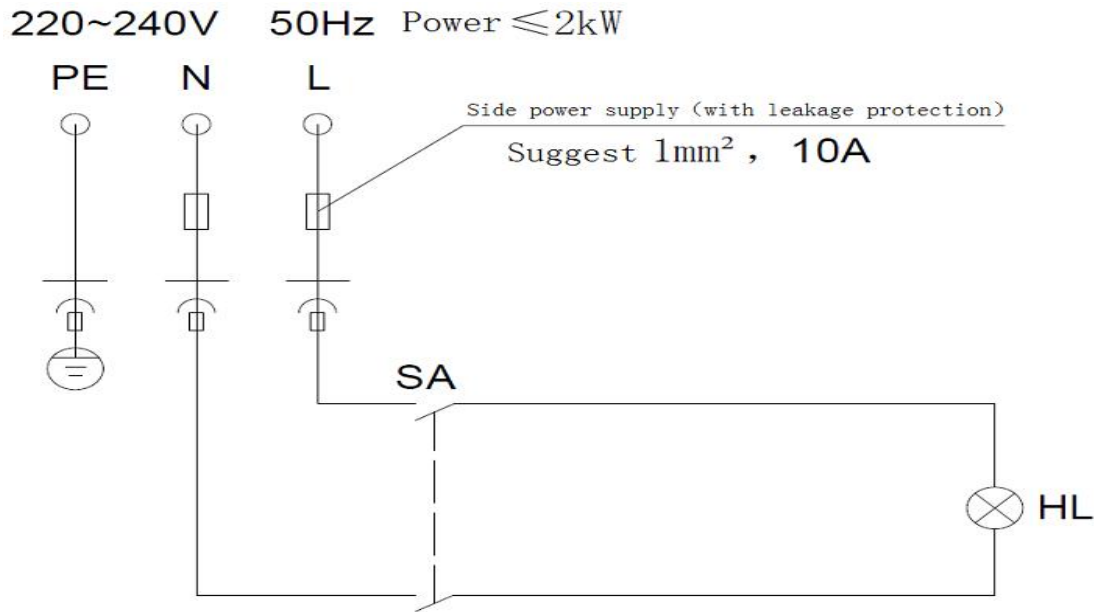

SA: Power switch HL: lamp

V. Notes

1. This manual does not apply to people who are physically, sensory and intellectually deficient, or lack experience and knowledge.
2. It is strictly prohibited to place and explosive materials around the machine and a good ventilation environment shall be maintained.
3. When using the machine, non-workers should not approach the machine, and do not allow children to touch the body, so as not to burn yourself.
4. When the machine is not in use, you should unplug the power plug or cut off the power switch to avoid accidents.
5. All maintenance work must be performed after the power is turned off.
6. If the machine is broken, including the power cord is damaged, do not disassemble it by yourself, please send it to the company's special maintenance department or dealer for repair.

VI. Instructions for Use

Before use, check whether the power supply voltage is consistent with the nameplate and whether the user's power switch and fuse meet the power requirements of the machine. The enclosure must be reliably grounded.

Operation steps:

1. Place the machine firmly, press the power switch to the "OFF" position, and turn on the power.
2. Press the power switch to the "ON" position. At this time, the tungsten light is on, part of the tungsten light is directly irradiated on the number pots, and some of the tungsten light is reflected by the mirror panel of the light box and then irradiated on the number pots, so that the number of copies is Keep within a temperature range.
3. Put in food that needs to be kept warm, keep the power switch in the "ON" position, and keep the device warm.
4. After the work is completed, press the power switch to the "OFF" position and cut off the power at the same time to ensure safety.

VII. Daily Inspections

1. Daily inspections must be performed frequently.
2. Regular product inspection can prevent serious accidents.
3. When you feel that the circuit or machine is malfunctioning, stop using it.
4. pay attention to check the machine status before and after every day of use.

Before Use	Is the machine tilted?
	Is the control panel damaged?
	Is the power cord aging, cracked, or broken?
Using	Are there any odors, odors, or vibrations?
	Is the temperature out of control or is there a leakage phenomenon?

VIII. Cleaning and Maintenance

1. Before cleaning, the power should be cut off to prevent accidents.
2. After working every day, clean it with a damp cloth in time and wipe it with a neutral detergent if necessary. At the same time, it is strictly prohibited to wash the light box directly with water, so as to avoid damage to its electrical components and cause personal safety accidents.
3. Regularly clean up the residues and residual oil on the pallets or serving bowls and keep them clean.
4. If not used at any time, the power switch should be turned off.
5. When not in use for a long time, the stove should be cleaned and placed in a well-ventilated, non-corrosive gas warehouse.

IX. Fault Analysis and Troubleshooting

Failure phenomenon	Cause	Method of exclusion
Turn on the power, press the power switch to the "ON" position, the power switch light is off	1. The power supply is abnormal and the power is not connected. 2.The fuse is blown 3.The power switch is damaged	1. Check the power supply and connection cables to make the power supply normal 2. Replace the fuse 3. Replace the power switch
Turn on the power, press the power switch to the "ON" position, the power switch light is on, and the tungsten light is off.	1. Poor contact between tungsten lamp and tungsten lamp holder 2.The tungsten lamp is damaged	1.Adjust the contact point of tungsten lamp and tungsten lamp holder 2.Replace tungsten lamp

The above fault items are for reference only. If a fault occurs, stop using it immediately, and notify professional technicians to check and repair as soon as possible.

X. Packing List

Model	Name	Electric Food Warmer	Light box	Light box bracket and fixing plate	Pan	Pallet Plate	User's Manual	Inspection Certificate
	QTY							
INF-PFW1		1	1	Each 2	1	1	1	1